

NOTE: These instructions require access to your modem through a physical connection. Please proceed with the steps below on a computer or laptop that is connected to your modem via an Ethernet Cable.

1. Go to your internet browser (i.e. Chrome, Firefox, or Internet Explorer) and enter 192.168.1.1




Login with your modem credentials, the default credentials are:

- Username: admin
- Password: ekw7566V

If you are unable to login, please contact support for assistance.


Navigate to the **Advanced Setup** section from the left menu, then click **NAT** on the submenu, then **Virtual Servers**. On the page that opens, click **Add** to create a new Port Forwarding rule.

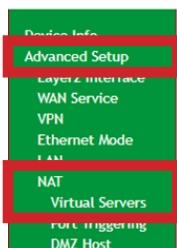


NAT -- Virtual Servers Setup

Virtual Server allows you to direct incoming traffic from WAN side (identified by Protocol and External port) to the Internal server with private IP address on the LAN side. The Internal port is required only if the external port needs to be converted to a different port number used by the server on the LAN side. A maximum 32 entries can be configured.

Server Name	External Port Start	External Port End	Protocol	Internal Port Start	Internal Port End	Server IP Address	WAN Interface	LAN Loopback	Enable/Disable	Remove
-------------	---------------------	-------------------	----------	---------------------	-------------------	-------------------	---------------	--------------	----------------	--------



2. You can now create a port forwarding rule from this menu.

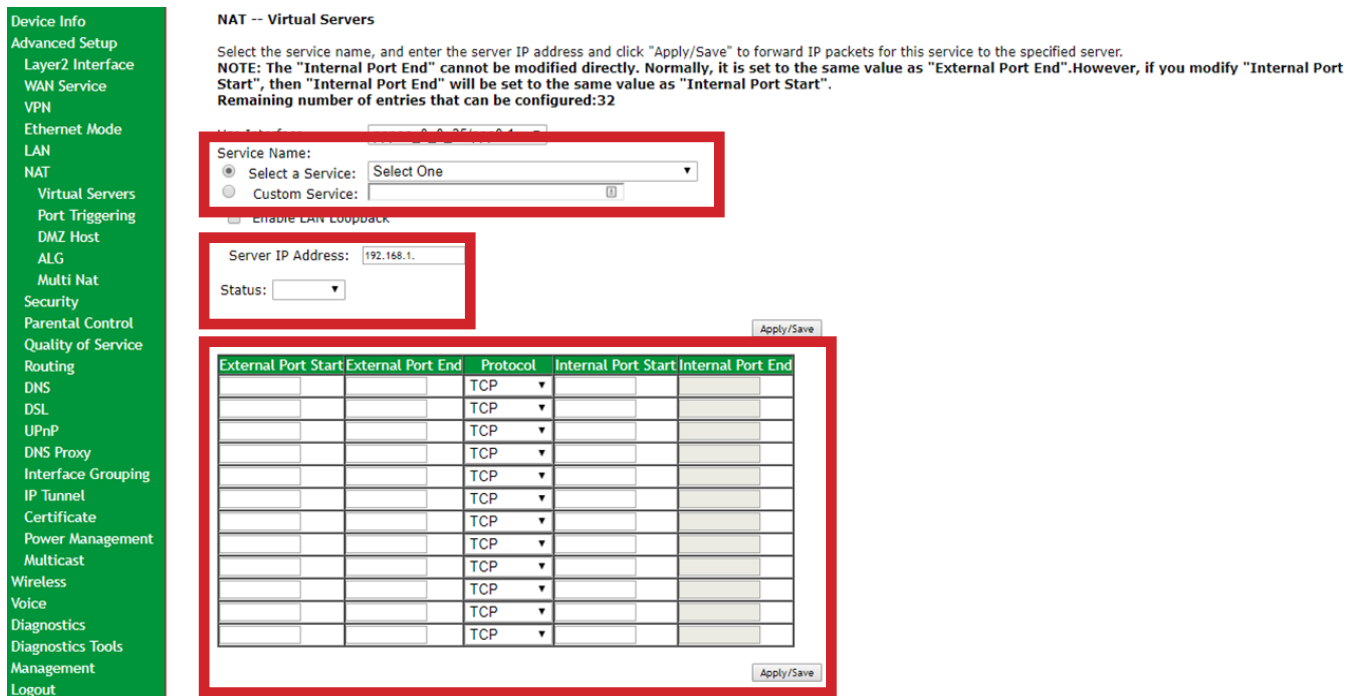

NAT -- Virtual Servers

Select the service name, and enter the server IP address and click "Apply/Save" to forward IP packets for this service to the specified server.
NOTE: The "Internal Port End" cannot be modified directly. Normally, it is set to the same value as "External Port End". However, if you modify "Internal Port Start", then "Internal Port End" will be set to the same value as "Internal Port Start".
 Remaining number of entries that can be configured:32

Service Name:
 Select a Service: Select One
 Custom Service:

Enable LAN Loopback

Server IP Address: 192.168.1.
 Status:

External Port Start	External Port End	Protocol	Internal Port Start	Internal Port End
		TCP		
		TCP		
		TCP		
		TCP		
		TCP		
		TCP		
		TCP		
		TCP		
		TCP		
		TCP		

Select a Service this is where you can add the port forwarding using a template for the service you are trying to forward.

Custom Service is where you type a name for the forwarding that you are doing so that you know what the forwarding is for.

Server IP Address is where you enter the IP of the device on your internal network you want to forward the ports to.

Status drop down is where you "Enable" or "Disable" the forwarding rule you are trying to setup.

External Port Start / End is the port that the application needs forwarded to the internal computer.

Protocol this would be the type of traffic that you want to forward to the internal device.

Internal Port Start / End is the port that you want the internal machine to receive the information on.

Apply/Save is what is used to save the changes you have made to the forwarding rules.